

TATTOO

DEKOR

CAR. BIKE. BOAT.

**FOLIATEC®.com**

---

**MONTAGEANLEITUNG • INSTALLATION INSTRUCTION**

**MODE D'EMPLOI • INSTRUCCIONES DE MONTAJE**

**ISTRUZIONI DI APPLICAZIONE**

---

---

TAT -  
TOO  
DEKOR

---

**FOLIATEC.com**

Neumeyerstraße 70

90411 Nürnberg • GERMANY

T: +49/(0)911/97544-0

F: +49/(0)911/97544333

E: techsupport@foliatec.com

I: [www.foliatec.com](http://www.foliatec.com)


---

Dekor/decor/décor/motivo/decoro

Trägerpapier/base paper/papier pour  
duplicateur/papel base/carta di supporto

A

Klebstreifen/tape/tuban adhesif/  
cinta adhesiva/nastro adhesivo

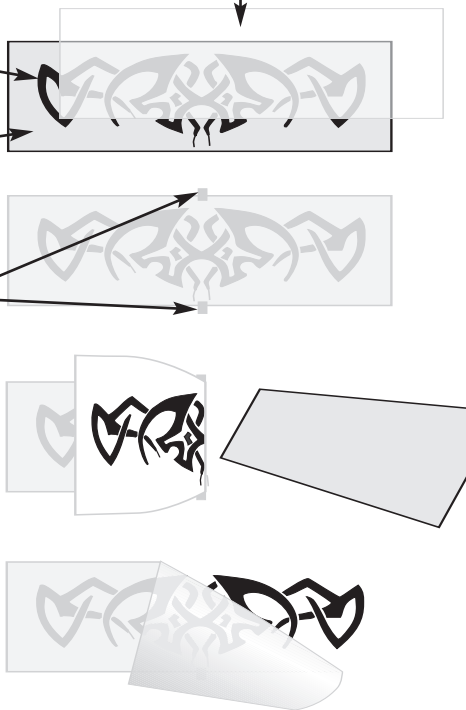

Diese Montageanleitung kann auf Grund technischer Änderungen durch eine neue Version ersetzt worden sein. Bitte informieren Sie sich auf unserer Website [www.foliattec.com](http://www.foliattec.com), ob es sich bei der vorliegenden Anleitung um die neueste Version handelt. Informationen zu FOLIATEC Produkten sowie Tipps und Tricks zur Montage finden Sie in unserem Internet-Technik-Forum unter [www.foliattec.com/service](http://www.foliattec.com/service)

Oder fragen Sie unser Technik-Team (Tel. +49 (0)911/975440)

These operating instructions may have been replaced with a newer version due to technical changes. Visit our website at [www.foliattec.com](http://www.foliattec.com) to see if the instructions provided represent the latest version. Information on FOLIATEC products as well as installation tips and tricks can be found in our Internet-Technique-Forum under [www.foliattec.com/service](http://www.foliattec.com/service)

Or contact our technical team (Tel. +49 (0)911-97 54 40).

**Hinweis:** Lesen Sie vor der Montage die Anleitung sorgfältig durch. Nehmen Sie sich für die Montage ausreichend Zeit. Die ideale Montagetemperatur liegt zwischen 15 und 25 °C

Die Sticker bestehen aus 3 Komponenten: Dekor, Trägerpapier, Übertragungspapier.

Die Dekore können entweder nass oder trocken verklebt werden. Bei der Nass-Montage haben Sie den Vorteil, das Dekor nach dem Auflegen noch einige Zeit verschieben zu können.

### Nass-Montage

**Sie benötigen ebenfalls:** Klebeband, Wassersprühflasche, Wasser (wir empfehlen destilliertes Wasser), ph-neutrales Spülmittel, Silikonentferner, Baumwolltuch (fusselfrei), Maßband, Folienstift, Haar-Fön.

**1** Zu beklebender Untergrund muß staub-, schmutz- und fettfrei sein. Ggf. Pflegemittelrückstände entfernen. (z.B. mit Silikonentferner). **Das Fahrzeug darf nicht frisch gewachst oder poliert sein!**

**2** Vergewissern Sie sich, ob das Dekor auf die gewünschte Fläche paßt.

**3** Dekor individuell anpassen bzw. mit Maßband ausmitteln. Markieren Sie die Haltepunkte mit Klebeband.

**4** Zu beklebende Fläche mit einer Mischung aus Spülmittel und Wasser (1/2 l Wasser, 10 Tropfen Spülmittel) befeuchten (nicht nass). Dekor mit Klebeband fixieren (A). Kleben Sie ungefähr mittig oben und unten mit je einem Streifen das Dekor fest. Zeichnen Sie eventuell Hilfslinien auf den Untergrund. Bei extrem großen Aufklebern oder auf schwierigen Flächen empfiehlt sich eine Teilung des Dekors in mehrere Segmente (Arbeiten in Teilschritten). Achten Sie darauf, dass Sie nicht in das Dekor schneiden. Trägerpapier von der klebenden Seite des Dekors vorsichtig abziehen. Die klebende Seite des Dekores jetzt noch einmal befeuchten (die Fläche darf nur feucht, nicht aber nass sein) und Dekor auflegen und positionieren. (Bei großen Flächen in zwei Montageschritten arbeiten, indem Sie das Trägerpapier nur bis zur Hälfte abziehen und dann abschneiden. Lassen Sie sich möglichst von einer zweiten Person helfen!). **VORSICHT:** Evtl. können kleine Segmente des Dekores am Trägerpapier haften bleiben. In diesem Fall sollten Sie das Segment mit dem Fingernagel am Übertragungspapier andrücken. Auszusparende Bereiche (z.B. Schlösser, Embleme, Zierleisten...) vorsichtig mit dem Cuttermesser herausschneiden. Türfalze u.ä. werden überklebt.

**5** Beiliegendes Montagerakel mit Baumwolltuch umwickeln. Feuchtigkeit unter dem Dekor herausrakeln. **Wichtig: Nur in eine Richtung rakeln. Hierbei die Kanten fest andrücken.**

**6** Ziehen Sie nun das Übertragungspapier im flachem 180° Winkel ab. Wenn sich das Papier nicht lösen sollte, wiederholen Sie den Montagepunkt 4 und beschleunigen Sie ggf. den Trocknungsprozess mit einem Haar-Fön. Sollten sich Blasen unter dem Dekor befinden, stechen Sie sie an einer Seite mit einer Stecknadel ein und streichen Sie die Luft von der anderen Seite ausgehend heraus. Beachten Sie, dass der Kleber des Dekores erst nach ca. 24 Stunden die optimale Haftung erreicht. Kanten fest andrücken.

**7** Verläuft das Dekor über die Tür- oder Kofferraumfalz o.ä., schneiden Sie mittig entlang des Falzes. Erwärmen Sie die überstehenden Kanten mit einem Fön und "legen" Sie diese um die Tür/Kofferraumkanten.

**Hinweis:** Das Dekor entfaltet seine volle Klebekraft nach ca. 24 Stunden. Rakeln Sie nach dieser Zeit ggf. nach. Wir bitten Sie, ca. 3-5 Tage auf Wasstraße oder Polierarbeiten zu verzichten. Vermeiden Sie grundsätzlich, dass Autopolitur auf das Dekor gelangt. Somit werden Sie lange Freude daran haben. Sollten Sie doch einmal an eine Entfernung denken, einfach mit einem Fön erwärmen und abziehen. Kleberückstände können z.B. mit Silikon-Entferner abgewischt werden.

### Trocken-Montage (nur für Profis)

(es ist keine Korrektur/Verschieben des Dekors bei der Montage möglich!)

**Sie benötigen ebenfalls:** Klebeband, Silikonentferner, Baumwolltuch

**1** Zu beklebender Untergrund muß staub-, schmutz- und fettfrei sein. Ggf. Pflegemittelrückstände entfernen. (z.B. mit Silikonentferner). **Das Fahrzeug darf nicht frisch gewachst oder poliert sein!**

**2** Vergewissern Sie sich, ob das Dekor auf die gewünschte Fläche paßt.

**3** Dekor individuell anpassen bzw. mit Maßband ausmitteln. Markieren Sie die Haltepunkte mit Klebeband.

**4** Dekor mit Klebeband fixieren (A). Kleben Sie ungefähr mittig oben und unten mit je einem Streifen das Dekor fest. Zeichnen Sie eventuell Hilfslinien auf den Untergrund. Bei extrem großen Dekoren oder auf schwierigen Flächen empfiehlt sich eine Teilung in mehrere Teile. Achten Sie darauf, dass Sie nicht in die Schrift oder Grafik schneiden. Trägerpapier von der klebenden Seite des Dekors bis auf Höhe des ersten Klebestreifens abziehen. Beginnen Sie an einer der oberen Ecken und ziehen das Trägerpapier langsam schräg zur gegenüberliegenden unteren Ecke ab. Streichen Sie das Dekor mit einem weichen Baumwolltuch während des Abziehens des Trägerpapiers gleichmäßig auf der zu beklebenden Fläche fest. **VORSICHT:** Evtl. können kleine Segmente des Dekores an dem Trägerpapier haften bleiben. In diesem Fall sollten Sie das Segment mit dem Fingernagel an dem Übertragungspapier andrücken. Entfernen Sie die Positionierungsklebestreifen (A) und verfahren Sie ebenso ausgehend von der anderen Seite des Dekores. Auszusparende Bereiche (z.B. Schlösser, Embleme, Zierleisten, Türkante...) vorsichtig mit dem Cuttermesser herausschneiden. Türfalze u.ä. werden überklebt.

**5** Ziehen Sie nun das Übertragungspapier im flachem 180° Winkel ab. Sollten sich Blasen unter dem Dekor befinden, stechen Sie sie an einer Seite mit einer Stecknadel ein und streichen Sie die Luft von der anderen Seite ausgehend heraus. Beachten Sie, dass der Kleber des Dekors erst nach 24 Stunden die optimale Haftung erreicht. Kanten fest andrücken.

**Tip:** Handwerklich ungeübten Personen empfehlen wir, die Montage durch eine Fachwerkstatt (z.B. FOLIATEC STYLING-TEAM-Station) durchführen zu lassen

**Note:** Read the instructions carefully prior to fitting. Allow sufficient time for fitting. The ideal application temperature is between 15 and 25 °C (60 and 78°F).

The stickers consist of 3 components: Adhesive, backing paper, application paper.

The stickers can be fitted wet or dry. Wet application has the advantage that you can still slide the sticker around for some time after positioning.

### Wet application

**You also need:** Tape, water spray bottle, water (distilled water is recommended), ph-neutral detergent, silicon remover, cotton cloth (non-fluffy), measuring tape, foil marker, hair-dryer.

- 1 The vehicle surface must be free of dust, dirt and grease. Remove cleaning agent residue if necessary (e.g. with silicon remover). **The vehicle must not be freshly waxed or polished!**
- 2 Make sure that the sticker fits on the intended surface area.
- 3 Fit the sticker individually; use a tape measure for accurate positioning as needed. Mark the perimeter points with adhesive tape.
- 4 Moisten (but do not wet) the vehicle surface with a mixture of detergent and water (1/2 liter water, 10 drops detergent). Position the sticker using adhesive tape (A). Use single strips of adhesive tape to secure the sticker at central points on the top and bottom of the sticker. Draw an outline of the sticker as needed to assist in fitting. It is advisable to cut the sticker into several sections (working in stages) when fitting very large stickers or when working on difficult surfaces. Make sure not to cut into the graphics. Carefully peel off the backing paper from the adhesive side of the sticker. Now, again moisten the adhesive side of the sticker (the surface must only be moist, not wet) and gently tack the sticker in place. (For large surface areas, work in two application stages by peeling off only half of the backing paper and then cutting it off. If possible have someone assist you). **CAUTION:** It is possible that small segments of the graphics remain stuck on the backing paper. In this case, press these segments back onto the application paper with your fingernail. Carefully cut out

areas around locks, emblems, trim etc. with a cutting knife. Tape over door and other edges.

- 5 Wrap the squeegee provided in a cotton cloth. Use the squeegee to press out any moisture trapped underneath the sticker. **Important: Squeegee in only one direction applying firm pressure along the edges.**
- 6 Now pull off the application paper at an angle of 180° (flat on itself). If the application paper should not come off, repeat application step 4 and, if necessary, accelerate the drying process using a hairdryer. If there are any air-bubbles underneath the sticker, use a pin to prick a hole in one side of the bubble and press the air out from the other side. Please note that the bonding agent on the sticker first reaches optimum adhesion after approximately 24 hours. Apply firm pressure to the edges.
- 7 If the graphics are positioned over door or trunk seams etc. cut along the middle of the gap. Heat the protruding edges with a hairdryer and mould them round the door / trunk edges

**Note:** The sticker achieves full adhesive strength after approximately 24 hours. Work over the surface with the squeegee again after this time, if necessary. You are requested not to use a car wash or wax and polish the vehicle for approximately 3 to 5 days. As a rule, make sure that car polish does not come in contact with the sticker. This will ensure that you will enjoy the sticker for a long time. If, however, you should ever wish to remove it, simply heat it with a hairdryer and pull it off. Adhesive residue can be wiped off with silicon remover, for example.

### Dry application (only for professionals)

(correction / repositioning of the sticker during application is not possible)

**You also need:** Adhesive tape, silicon remover, cotton cloth

- 1 The vehicle surface must be free of dust, dirt and grease. Remove cleaning agent residue if necessary (for example with silicon remover). **The vehicle must not be freshly waxed or polished!**
- 2 Make sure that the sticker fits on the intended surface area.

- 3 Fit the sticker individually; use a tape measure for accurate positioning as needed. Mark the perimeter points with adhesive tape.
- 4 Position the sticker using adhesive tape (A). Use single strips of adhesive tape to secure the sticker at central points on the top and bottom of the sticker. Draw an outline of the sticker as needed to assist in fitting. It is advisable to cut the sticker into several sections (working in stages) when fitting very large stickers or when working on difficult surfaces. Make sure not to cut into the lettering or graphics. Peel off the backing paper from the adhesive side of the sticker up to the first adhesive strip. Begin at one of the top corners and slowly peel off the backing paper diagonally towards the opposite lower corner. While peeling off the backing paper use a soft cotton cloth to press the sticker evenly and firmly onto the vehicle surface. **CAUTION:** It is possible that small segments of the lettering or graphics remain stuck to the backing paper. In this case, press these segments back onto the application paper with your fingernail. Remove the strips of positioning tape (A) and proceed as before, starting from the other side of the sticker. Carefully cut out areas around locks, emblems, trim, door edges etc. with a cutting knife. Tape over door and other edges.
- 5 Now pull off the application paper at an angle of 180° (flat on itself). If there are any bubbles underneath the sticker, use a pin to prick a hole in one side of the bubble and press the air out from the other side. Please note that the bonding agent on the sticker first reaches optimum adhesion after approximately 24 hours. Apply firm pressure to the edges.

**Please note:** We recommend that persons who are not skilled craftsmen have the sticker fitted by a qualified workshop (e.g. FOLIATEC STYLINGTEAM station).